

Terra Crusher Parts List

Part Number	Description
0004173	A Part(A1~A4)
0004169	B Part(B1,B2)
0004170	C Part(C1,C2)
0004168	D Part(D1,D2)
0004172	E Part(E1,E2)
0004171	F Part(F1~F6)
9004122	G Part(G1~G4) G5 Drive spur gear G6 Reverse gear carrier G7 Drive pinion
0114022	J Part(J1~J6)
0114023	K Part(K1~K4)
0114025	L Part(L1,L2)
9114021	M Part(M1,M2) M3 Mechanism deck M4 Mechanism box M5 Mechanism hatch
0114031	S Part(S1~S5)
50473	Q Part(Q1,Q4,Q5)
0224011	U Part(U1~U3)
0225072	X Part(X2,X5,X7)
0444145	H. Universal Joint L / black (3,1,2)
0444162	N. Universal joint R / silver(3,1,2)
9334074	P. 2-Speed gear P1 Spur gear P2 2-Speed pinion P3 Spur gear / 1st gear P4 Spur gear / 2nd gear
9415874	R. 2-Speed transmission clutch shoe(1,2)
0444143	T. Main frame(1,2)
0444169	Y. Shift clutch parts(1,2)
0445749	Z. 6mm Adjuster(1)
9415843	DIFF. GEAR BAG MA1. Diff. joint / long MA2. Diff. joint / short MA3. Diff. gear / small MA4. Diff. bevel gear shaft
9804145	MA5. Ring gear MA6. 9mm Washer MA7. Bevel pinion BBW. 3 x 12mm Tapping screw
9415844	CROSS JOINT BAG MB1. Cross joint MB2. Joint shaft MB3. Diff. gear / small MB4. 1.5mm E-ring MB5. 2.6 x 14mm Screw pin
9804146	

9415846	SUSPENSION ARM BAG
	<i>MC1. 3.5 x 72.5mm Suspension shaft</i> <i>MC2. 3.5 x 33mm Screw pin</i> <i>MC3. 6 x 7mm Ball connector</i> <i>MC4. Adjuster rod</i> <i>MC5. 4 x 15mm Step crew</i>
9415848	ROLL BAR BAG
	<i>MD1. 3.5 x 72.5mm Suspension shaft</i> <i>MD2. 4mm Flange nut</i> <i>MD3. 4mm Flange lock nut</i>
9415849	STEERING ARM BAG
	<i>ME1. Steering post</i> <i>ME2. 3mm Stainless Washer</i> <i>ME3. 3 x 42mm Threaded shaft</i> <i>ME4. 3 x 10mm Step screw</i> <i>ME5. 3 x 15mm Screw</i> <i>MC3. 6 x 7mm Ball connector</i>
9415850	DAMPER PARTS BAG
	<i>MF1. Steering post</i> <i>MF2. Damper spring</i> <i>MF3. 3 x 42mm Threaded shaft</i> <i>MF4. 3mm O-ring / brown</i> <i>MF5. 3 x 14mm Step screw</i> <i>MF6. 3mm Lock nut / black</i> <i>MF7. 4 x 5.6mm Flanged pipe</i> <i>MF8. 3 x 48mm Screw</i> <i>MF9. Rubber Pipe</i>
8085091	ENGINE
7604013	1. Engine
5404006	2. Engine mount
9805612	3. 3 x 10mm Cap screw
50587	4. 3mm Spring washer
41003	5. Glow plug
7684113	6. Crank shaft housing
7684050	7. Crank shaft
7684114	8. Cylinder & Piston
7684115	9. Heat sink head
7684040	10. Connecting rod
7684116	11. Piston pin
7684007	12. Back plate
7684051	13. Drive washer
7684042	14. Screw
7684117	15. Head gasket
7684011	16. Back plate gasket
7684013	17. Carburetor screw
7684016	18. Starter shaft
7684118	19. Carburetor
7684119	20. Throttle rotor
7684047	21. Rotor adjustment screw & Spring
7684048	22. Throttle lever
7684066	23. Needle valve
7684069	24. Carburetor sealing

7684070	25. Carburetor O-rings
	26. Propeller nut (not used)
	27. Propeller washer (not used)
ENGINE STARTING GEAR UNIT	
0554002	MG1. Starter gear cover
	MG7. 53T Gear
	MG8. Gear cover sticker
	MG9. 38T
7434004	MG2. 380 Motor
5704001	MG3. One-way bearing
4304015	MG4. Motor plate
4304014	MG5. Starter gear plate
3544001	MG6. 16T Aluminum drive gear
6264006	MG10. 26 x 34mm Silicone rubber tube
50588	MG11. 2mm E-ring
3485055	MG12. 3 x 18mm Stainless shaft
	MG13. 2.6mm Nut(not used)
9804147	MG14. 2.6 x 5mm Screw
	MG16. 2.6 x 8mm Screw
50586	MG15. 3mm Washer
ENGINE RELATED PARTS	
7624012	MH1. Manifold
41045	MH2. Air cleaner
41044	MH3. Semi-metal muffler gasket
3454117	MH4. Flywheel
3454119	MH5. Pilot shaft
3454118	MH6. Clutch bell
3514002	MH7. 16T Pinion
9804149	MH8. Engine clutch shoe
	MH9. Engine clutch spring
50587	MH10. 3mm Spring washer
9805612	MH11. 3 x 10mm Cap screw
9804148	MH12. 3 x 32mm Cap screw
9805672	BF3. 840 Ball bearing
53066	BF4. 1280 Ball bearing
2300010	MA6. 9mm Washer
9415851	FUEL TANK BAG
	<i>MI1. Fuel tank</i>
	<i>MI2. 3 x 10mm Flange tapping screw</i>
	<i>MF4. 3mm O-ring / brown</i>
9415852	GEAR UNIT CONNECTOR CABLE BAG
	<i>MJ1. Gear unit connector cable</i>
	<i>MJ2. Connector cap</i>
	<i>MJ3. Nylon band</i>
	<i>MJ4. 3 x 20mm Tapping screw</i>
	<i>MJ5. Spiral tube</i>
9415853	COUNTER SHAFT BAG
	<i>MK1. Counter shaft</i>
9805489	<i>MK2. 5mm Disc spring</i>
	<i>MK3. 4mm Washer</i>
	<i>MK4. Pressure disc</i>

9415873	<i>MK5. Slip washer</i>
50589	<i>MK6. 5mm E-ring</i>
	<i>MK7. 4mm E-ring</i>
50594	<i>MK8. 2 x 10mm Stainless shaft</i>
	<i>MK9. Pressure plate</i>
9805557	<i>MD3. 4mm Flange lock nut</i>
9415854	MAIN SHAFT BAG
	<i>ML1. Main shaft</i>
	<i>ML2. Support ring</i>
	<i>ML3. 3 x 14mm Stainless shaft</i>
	<i>ML4. 3 x 12mm Stainless shaft</i>
	<i>ML5. Shift clutch pad</i>
5404005	<i>ML6. Shift Clutch Housing</i>
	<i>ML7. Shift Clutch Cam</i>
2300010	<i>MA6. 9mm Washer</i>
9415855	2 SPEED TRANSMISSION BAG
9805632	<i>MM1. 2 x 10mm Cap screw</i>
	<i>MM2. Timing spring</i>
	<i>MM3. 2 Speed transmission clutch pad</i>
	<i>MM4. 2.5mm Spring pin</i>
	<i>MM5. Second gear aluminum hub</i>
	<i>MM6. 2 x 3mm Screw</i>
	<i>MM7. Rubber cap</i>
9415856	FINAL GEAR SHAFT BAG
	<i>MN1. Final gear shaft</i>
50573	<i>MN2. 2 x 8mm Tapping screw</i>
	<i>MN3. 6mm Washer</i>
	<i>MN4. Drive bevel gear</i>
	<i>MN5. Reverse bevel gear / large</i>
	<i>MN6. Reverse bevel gear / small</i>
	<i>MN7. Reverse bevel gear shaft</i>
	<i>MN8. Bevel gear bushing</i>
50594	<i>MK8. 2 x 10mm Stainless shaft</i>
9415866	WHEEL NUT PARTS BAG
	<i>MO1. 2.5 x 12mm Stainless shaft</i>
	<i>MO2. 5mm Flange lock nut</i>
	<i>MO3. 5mm Flange lock nut / black / counterclockwise</i>
9415857	BRAKE PARTS BAG
	<i>MP1. Brake shaft</i>
	<i>MP2. Brake pad</i>
50955	<i>MP3. Brake disc</i>
	<i>MP4. Brake hub</i>
	<i>MP5. 4 x 6.5mm Flanged pipe</i>
	<i>MJ4. 3 x 20mm Tapping screw</i>
	<i>MK6. 5mm E-ring</i>
9415858	PROPELLER SHAFT BAG
	<i>MQ1. Front propeller shaft</i>
	<i>MQ2. Rear propeller shaft</i>
9415859	UNIVERSAL PROPELLER JOINT BAG
	<i>MR1. Universal propeller joint</i>
	<i>MB5. 2.6 x 14mm Screw pin</i>
9415860	ROD BAG

	<p>MS1. Shift rod MS2. Throttle rod MS3. Brake rod MS4. 3mm Grub screw MS5. Rod mount MS6. 2mm Stopper MG11. 2mm E-ring</p>
9415861	MECHANICS BOX BAG
	<p>MT1. Return spring MT2. Hex mount MT3. 2.6 x 10mm Tapping screw MT4. 2.6 x 10mm Binding screw MT5. Servo saver spring / gold MT6. Servo saver spring / silver MT7. 3mm Flange nut MT8. Dust proof sponge MT9. Sponge tape MT10. Snap pin / large MT11. Color band BA1. 3 x 12mm Tapping screw MC3. 6 x 7mm Ball connector MF5. 3 x 14mm Step screw MI2. 3 x 10mm Flange tapping screw</p>
9415863	MUFFLER BAG
	<p>MU1. Muffler baffle MU2. Muffler B MU3. Muffler A MU4. 28mm O-ring MU5. 3 x 20mm Screw MU6. Muffler pipe MU7. Silicone pipe / large MF4. 3mm O-ring / brown MG15. 3mm Washer MJ4. 3 x 20mm Tapping screw MF6. 3mm Lock nut / black</p>
9444296	
9415864	FUEL PIPE BAG
	<p>MV1. Silicone pipe 28cm / Fuel pipe MV2. Silicone pipe 32cm / Pressure pip</p>
9415865	TIRE BAG w/WHEELS
	<p>MW1. Tires / right MW2. Tires / left</p>
9415867	TOOL BAG
	<p>MX1. Plug wrench MX2. Box wrench / cross MX3. 1.5mm Hex wrench MX4. 2mm Hex wrench MX5. 2.5mm Hex wrench MX6. 2.4mm Hex wrench / large MX7. Wrench MX8. E-ring setter MX9. Box wrench</p>
9415870	SNAP PIN BAG

	MY1. Snap pin / small MT10. Snap pin / large
9415871	NYLON BAND BAG MZ1. Nylon band / small MZ2. Nylon band / large
9415868	SCREW BAG A BA1 3 x 12mm Tapping screw
9415869	SCREW BAG B BB1. 3 x 15mm Tapping screw BB2. 3 x 12mm Head-flat tapping screw BB3. 3 x 18mm Tapping screw BB4. 3 x 10mm Tapping screw
50577	
9805666	RECEIVER SWITCH BC1. Receiver switch BC2. Receiver switch plate BC3. Receiver switch screw
8085029	BD1. ADSPEC GP Transmitter
7252144	BD2. Transmitter antenna
7304019	BD3. Servo TP-S3302
7305027	BD4. Servo TP-S3003
7305026	BD5. Receiver TP-R132J
7251811	BD6. Batterybox R2-BSSN
9495382	BD7. Sticker bag
9804109	BD8. Fuel filler
6095003	BD9. Antenna pipe
7304005	BD10. Engine starter
BODY	
8085093	BE1. Body / transparent
9335370	BE2. Body / painted
9415847	BF1. Aluminum chassis
9415845	BF2. 44mm Drive shaft
9805672	BF3. 840 Ball bearing
53066	BF4. 1280 Ball bearing
53065	BF5. 1260 Ball bearing
53029	BF6. 1150 Ball bearing
53126	BF7. 1510 Ball bearing
5700099	BF8. 2617 Ball bearing
53270	BF9. 1060 Ball bearing
5700062	BF10. 8mm One-way Ball bearing
SPARE PARTS	
9415876	Brake disc x 2
9804111	Starter fuse x 2